

II II x

W S W Me W MINNOW SW

M N



- Using the LCD Touchpanel
- Powering the System On and Off
- Navigating the Control Menu
- Displaying Items via Document Camera
- Requesting Technical Assistance
- Accessing Additional Resources










Touchscreen Functionality Wireless Mouse/Keyboard No DVD Player

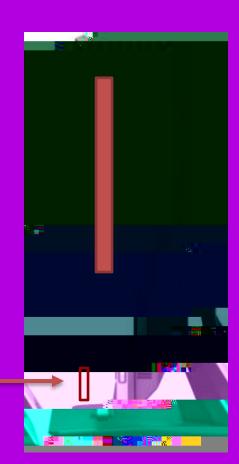

Power Button

Logging In






Control Touchpanel

The Crestron Touch Panel controls classroom technology.




Getting Started

Touch the Crestron screen to begin.

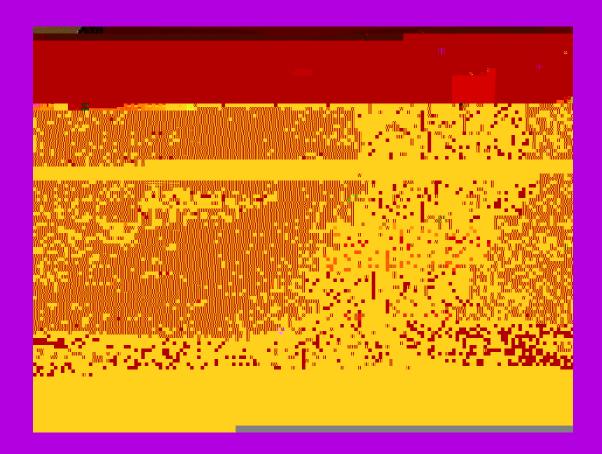

Control Menu

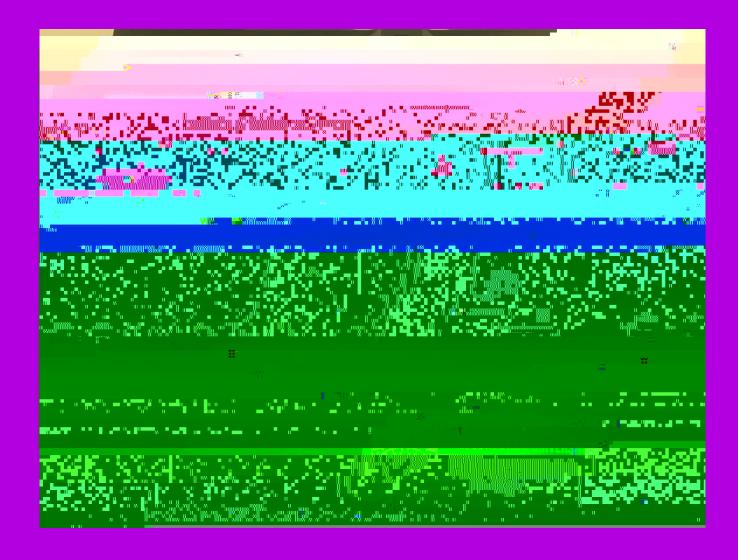








Computer




PC Connection


Document Camera

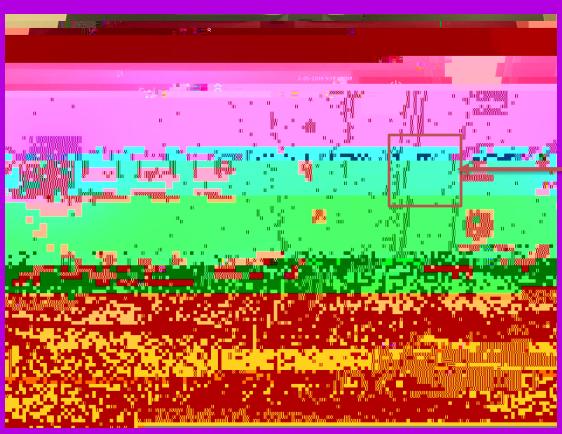


Document Cameras are provided upon request via Service Ticket at www.servicedesk.valdosta.edu

Laptop

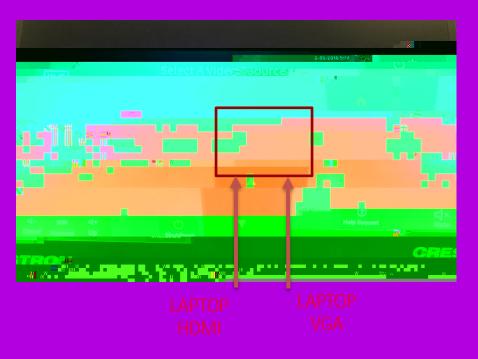

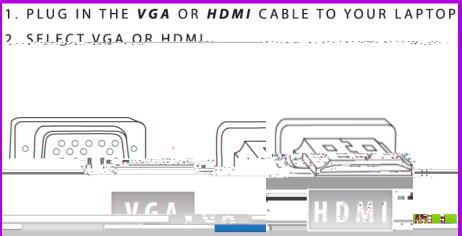



HDMI Cable

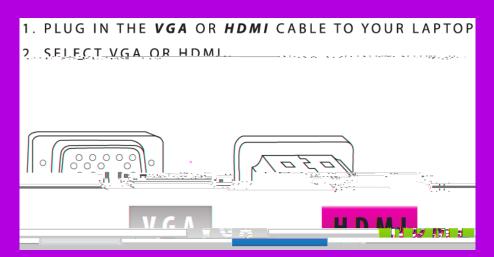






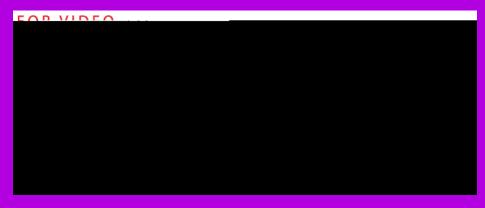


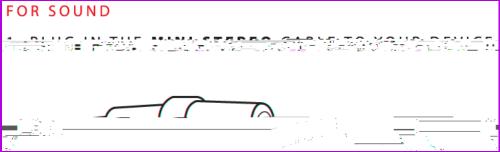




RCA Cable

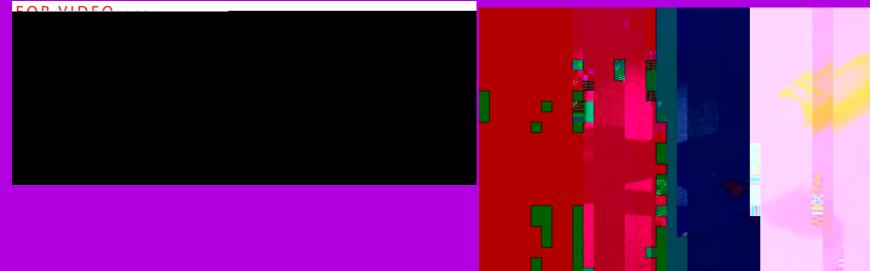

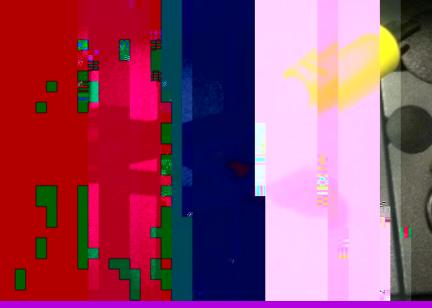

Mini Stereo Cable

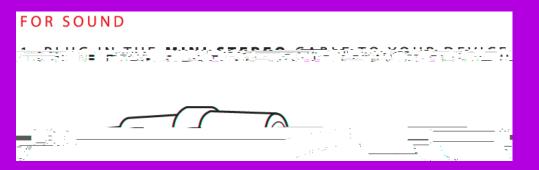



Volume Controls

Volume Controls are located at the bottom of the screen







Contact the Helpdesk...



Phone: 229-245-HELP (4357)



Email: helpdesk@valdosta.edu



Log off the computer

Collect personal effects



For other video tutorials and guides please visit our website at:

www.valdosta.edu/tc

Thank You for Watching.



Figure 1. HP EliteOne 800 All-in-One PC Retrieved from http://www8.hp.com/us/en/ads/aio-products/eliteone-800.html?jumpid=reg_r1002_usen_c-001_title_r0001